EVEREST SIDE BAG

USER MANUAL





INCLUDED

EVEREST Side Bag x2



Detachable shoulder strap

x2



Universal Fixation Straps

x2



UNIVERSAL STRAP ASSEMBLY

Undo the hook and loop closure to fully open the universal fixation straps.



With each strap, hook the two G-hooks into the webbing loop on the back of a Side Bag, ensuring the hooks are facing opposite directions.







Then pass the other end of the fixation strap through the metal rectangular ring on the other Side Bag, pull the strap through and secure the hook and loop patch to achieve the desired strap length. Repeat the same process with the second strap.







With the universal straps pre-attached, lift the pair of side bags and place them over or under the motorcycle seat. If needed, readjust the universal fixation straps to achieve the desired length.





Pass the lower buckle straps around the lower tube of the frame, then refasten the buckles on the front of the bag.







To tighten the straps, pull up on the lower tab of the buckle to release the camlock, adjust the straps to the desired length, then press down on the tab to reengage the camlock and prevent the webbing from loosening. Once tightened, the excess webbing length can be folded and secured with the hook and loop strip.







7 For a more secure fitment, steps 5-6 can be repeated with the upper straps, securing them around the upper pipe of the side frame. Ensure that the bags are securely attached before each operation of the vehicle.

FAST FIT MECHANISM ASSEMBLY

Release the buckles of the lower straps and open the hook and loop straps on the back panel to access the back pocket. With the mechanism holes facing upwards, slide the Fast Fit mechanism plate into the pocket, so the mechanism holes align with the cutouts in the pocket, then reattach the hook and loop straps to firmly secure the mechanism.



Furchtlos Side Frame

Variant

GVMK Variant

Furchtlos Aluminum Plate

Variant

FAST FIT SIDE BAG ASSEMBLY

Position the bag so the legs of the mechanism are on either side of the stopper on the side frame, then push the top of the bag towards the frame to engage the wedge.





For a more secure fitment, pass the lower buckle straps around the lower tube of the frame, then refasten the buckles on the front of the bag.







To remove the bag from the motorcycle, open the flap to access the key. Insert the key and turn it 90 degrees. With the key turned, push the button down to release the lock. Once the lock is released, the bag can be lifted away from the motorcycle.







FAST FIT TAIL BAG ASSEMBLY

Position the bag so the legs of the mechanism are inserted in the corresponding holes on the aluminum plate, then push the top of the bag towards the plate to engage the wedge.





To remove the bag from the motorcycle, open the flap to access the key. Insert the key and turn it 90 degrees. With the key turned, push the button down to release the lock. Once the lock is released, the bag can be lifted away from the motorcycle.







WARNINGS & GUIDELINES

WARNING!

Please read the user manual carefully and follow the recommended assembly method.

It's recommended to check that the bag is securely attached before each operation of the motorcycle.

Do not drive the motorcycle with a bag that is not fully closed, is not properly secured, or in any other condition that may affect the safe operation of the vehicle.

Ensure that no part of the bag, including the fixation straps or other accessories, has close contact with high temperature areas such as the exhaust pipe.

CLEANING & MAINTENANCE

To maintain a nice appearance, it's recommended to use silicone lubricant spray and a soft cloth to wipe the bags clean.

Do not use harsh cleaning agents, chemicals or high pressure cleaners.

When the surface material is exposed to direct sunlight for a long time or is affected by environmental factors (such as haze, acid rain, etc.), the color may fade or change.

If the product is contaminated with gasoline or similar substances it must be cleaned immediately!

FURCHTLOS does not assume any responsibility for product damage and color change caused by improper cleaning and maintenance!



CLEAN WITH A DAMP CLOTH OR SOFT SPONGE



DO NOT PRESSURE WASH



CLEAN GASOLINE OR OTHER SPILLS IMMEDIATELY!



DO NOT USE CHEMICALS OR HARSH CLEANING AGENTS



VIDEO TUTORIAL



WARRANTY REGISTRATION



FOLLOW & TAG US @FURCHTLOSMOTO